

TRANSLATION OF THE OPERATING INSTRUCTIONS

**O 5.10/16/21/25**

**U 5.40**

# **ROTARY VANE VACUUM PUMPS**

oil-lubricated

---

**MAKE IT BECKER.**



 **BECKER**

**Important information for the user of the operating instructions**

We reserve the right to make technical changes and additions to the operating instructions.

No liability is assumed for the content, in particular for damage caused by existing, non-existent or incorrect information.

The distribution of these operating instructions is not permitted unless expressly authorised.

**Operating instructions valid for:**

General designation	Rotary vane vacuum pump, described below as the "pump".
Product type	oil-lubricated
Model	O 5.10/5.16/5.21/5.25 U 5.40
Manufacturer	<b>Gebr. Becker GmbH</b> Hölker Feld 29-31 42279 Wuppertal

**Contents**

<b>1</b>	<b>TO THE OPERATING INSTRUCTIONS</b>	<b>5</b>
1.1	GENERAL INFORMATION	5
1.2	STRUCTURE OF THE SAFETY INSTRUCTIONS	5
1.3	SAFETY SYMBOLS	5
1.4	ADDITIONAL DOCUMENTATION	6
1.5	WARRANTY AND LIABILITY	6
1.6	MODIFICATIONS AND CONVERSIONS	6
<b>2</b>	<b>BASIC SAFETY INSTRUCTIONS</b>	<b>7</b>
2.1	PROVISION	7
2.2	OBLIGATIONS OF THE OPERATOR	7
2.3	OBLIGATIONS OF THE STAFF	7
2.4	PERSONNEL QUALIFICATION	8
2.5	INTENDED USE	8
2.6	UNAUTHORISED USE	8
2.7	PROTECTIVE MEASURES FOR USERS	8
2.8	INFORMATION ON RESIDUAL RISKS	9
2.9	SAFETY INSTRUCTIONS	9
2.10	BEHAVIOUR IN THE EVENT OF DANGER AND ACCIDENTS	11
2.11	REQUIREMENTS FOR STABILITY	12
2.12	OCCUPATIONAL SAFETY	12
2.13	AIRBORNE NOISE EMISSIONS	12
2.14	ERGONOMICS	12
<b>3</b>	<b>OPERATING CONDITIONS</b>	<b>13</b>
<b>4</b>	<b>PUMP DESCRIPTION</b>	<b>15</b>
4.1	GENERAL DESCRIPTION OF THE PUMP	15
4.2	SIZES	15
4.3	VARIANTS	15
4.3.1	VARIANTS O 5.10-O 5.25	15
4.3.2	VARIANTS U 5.40	15
4.4	COMPONENTS	16
4.5	MOTORS	17
4.6	SAFETY AND PROTECTIVE EQUIPMENT	17
4.7	TESTING THE SAFETY AND PROTECTIVE EQUIPMENT	18

4.8	OPERATING MATERIALS AND CHEMICALS	18
<b>5</b>	<b>TRANSPORT</b>	<b>19</b>
<b>6</b>	<b>INSTALLATION AND COMMISSIONING</b>	<b>20</b>
6.1	GENERAL REQUIREMENTS	20
6.2	PREPARATORY ACTIVITIES	20
6.2.1	FILL WITH OIL	20
6.2.2	CONNECTING THE MEDIA LINE	21
6.3	ELECTRICAL INSTALLATION	22
6.3.1	ELECTRICAL CONNECTION	22
6.4	SWITCH ON THE PUMP	23
6.5	NORMAL OPERATION	23
6.6	SWITCH OFF THE PUMP	23
6.7	RECOMMISSIONING	23
<b>7</b>	<b>TROUBLESHOOTING/TROUBLESHOOTING</b>	<b>25</b>
7.1	FAULT TABLES	25
<b>8</b>	<b>MAINTENANCE, SERVICING AND DISMANTLING</b>	<b>28</b>
8.1	MAINTENANCE AND SERVICING	28
8.2	MAINTENANCE INTERVALS	28
8.2.1	MAINTENANCE INTERVALS O 5.10-O 5.25 (SHORT OIL TANK)	29
8.2.2	MAINTENANCE INTERVALS O 5.10-O 5.25 (LONG OIL TANK)	30
8.2.3	MAINTENANCE INTERVALS U 5.40	30
8.2.4	MAINTENANCE INTERVALS U 5.40 XL AND U 5.40 XL K	31
8.3	PREPARATION	31
8.4	MAINTENANCE ACTIVITIES	31
8.4.1	CLEAN SUCTION FILTER (OPTIONAL)	32
8.4.2	CLEAN THE SURFACE WITH COMPRESSED AIR	32
8.4.3	CHECK OIL LEVEL	33
8.4.4	OIL CHANGE	33
8.4.5	CHANGE AIR/OIL SEPARATOR	34
8.4.6	CLEAN THE SUCTION STRAINER	34
8.4.7	CHANGE GAS BALLAST VALVE FILTER	34
8.5	MEDIA LINES	35
8.6	CONDITIONS FOR SWITCHING ON AGAIN	35
8.7	SPARE AND WEAR PARTS	35
8.8	TEMPORARY SHUTDOWN	35
8.9	CLEANING	35
8.10	DISMANTLING AND DECOMMISSIONING	36
8.11	STORAGE	36
8.12	WASTE DISPOSAL	37
<b>9</b>	<b>PRODUCT DATA SHEET</b>	<b>38</b>
9.1	PRODUCT OVERVIEW	38
9.2	OPERATING PARAMETERS	38
9.2.1	OPERATING PARAMETERS O 5.10-5.25	38
9.2.2	OPERATING PARAMETERS U 5.40	39
9.3	OPERATING RESOURCES	40
9.4	TECHNICAL DATA	40



# 1 TO THE OPERATING INSTRUCTIONS

## 1.1 GENERAL INFORMATION

These operating instructions are an integral part of the pump and contain the necessary information and important instructions for operating the pump safely and properly. Observing them will help:

- Avoid dangers
- Reduce repair costs and downtime
- increase the reliability and service life of the product

It is the responsibility of the operator to ensure the availability of this document. This applies in particular if the document is lost.

All persons working on the pump must have read and understood the operating manual and these operating instructions.



### HINT

For a detailed description of the safety instructions, see chapter 2 "Basic safety instructions".

---

## 1.2 STRUCTURE OF THE SAFETY INSTRUCTIONS

Safety instructions are identified by a pictogram and a signal word. The following signal words are used to indicate dangers, prohibitions and important information:



### DANGER

This signal word indicates an imminent danger that could result in serious injury or even death.



### WARNING

This signal word indicates a potentially imminent danger that could result in serious injury or even death.



### CAUTION

This signal word indicates a potentially imminent danger that could result in minor or serious injuries.



### ATTENTION

This signal word indicates a potentially imminent danger that could result in material damage.



### HINT

This symbol indicates tips, recommendations and further information.

---

## 1.3 SAFETY SYMBOLS

### Warning signs:



General warning sign



Warning of hand injuries



Warning of hot surfaces



Warning of automatic start-up



Danger of slipping



Tripping hazard



Warning of electrical voltage

### Hazardous substance symbol:



Attention, environmentally hazardous

---

### Command sign:



Attention



Use foot protection



Use hand protection



Use hearing protection



Use eye protection



Use a protective mask

---

**Hint:**



General information

---

## 1.4 ADDITIONAL DOCUMENTATION

In addition to these operating instructions, the following documents and instructions must be observed:

- Safety symbols according to chapter 1.3 on the pump and on hazardous material containers
- Regulations on accident prevention, occupational safety and environmental protection
- Operating instructions and documents for components, assemblies and aids provided by third-party manufacturers.
- Spare parts lists
- Data sheets

## 1.5 WARRANTY AND LIABILITY

Warranty and liability claims for personal injury or damage to property are invalid if

- Failure to observe the instructions for transport and installation;
- improper use (misuse) or improper operation;
- Failure to observe the operating instructions and the instructions contained therein;
- improper or non-executed maintenance and servicing work;
- incorrect installation, commissioning, maintenance, servicing and cleaning;
- Use of unauthorised operating materials, lubricants or spare parts;
- defective, incorrectly installed or dismantled protective devices;
- inadequate monitoring of pump parts subject to wear;
- Use of externally procured equipment that has not been approved by the manufacturer;
- improper disassembly;

## 1.6 MODIFICATIONS AND CONVERSIONS

Modifications or conversions are prohibited without written authorisation from the manufacturer and are therefore excluded.



**HINT**

Description of the safety instructions. See chapter 2.9 "Safety instructions"

---

## 2 BASIC SAFETY INSTRUCTIONS

These operating instructions serve as a basis for the safe use and operation of the pump. The operating instructions, in particular the safety instructions and the rules and regulations applicable to the place of use, must be observed by all persons working on or with the pump.

Furthermore, the generally applicable legal and other rules and regulations for accident prevention (e.g. personal protective equipment) and environmental protection must be observed.



### HINT

Some activities on the pump require compliance with special safety regulations. These safety instructions can be found in the respective chapters of these operating instructions.



### HINT

The operating instructions must always be kept at the place of use and must be freely accessible to all persons working with the pump.

The instructions of the occupational safety specialist and the instructions from the briefings must be followed at all times.

---

The pump is only intended for the intended use described in the chapter 2.5.

The pump must not be used for purposes other than those for which it is intended.

All work on the pump may only be carried out by qualified and trained personnel (see chapter 2.4 "Personnel qualifications").

The safety instructions given in chapter 2.9 must be observed for all work on the pump.

### 2.1 PROVISION

The pump is a machine within the meaning of the Machinery Directive 2006/42/EC Art 2a.

The pump conforms to the health and safety requirements of the Machinery Directive 2006/42/EC.

The pump may only be used once the operator has determined that the pump is installed in accordance with the state of the art.

This is fulfilled if, among other things, the operating conditions listed in these operating instructions in accordance with Directive 2006/42/EC Annex 1 Para. 1.7.4.2.i have been fully implemented.

### 2.2 OBLIGATIONS OF THE OPERATOR

The operator undertakes to only allow persons to work on the pump who

- are familiar with the basic occupational safety and accident prevention regulations;
- were instructed for the activities on the pump;
- have read and understood these operating instructions before carrying out any work on the pump;
- have reached the legal minimum age;
- are fit for use;
- are rested and not under the influence of drugs or medication;
- reliably fulfil the work assigned.

In addition, the operator must train staff at regular intervals and inform them about the hazards.

The personnel of the operating company must be permanently committed to safe working practices and informed about the dangers and risks of the pump. This applies in particular to the safety instructions.

The operator must provide the personnel with the necessary protective equipment.

### 2.3 OBLIGATIONS OF THE STAFF

All persons who are commissioned to work on the pump are obliged, before starting work, to

- to observe the basic regulations on occupational safety and accident prevention and
- to read and observe these operating instructions.



### HINT

Only persons who have read and understood these operating instructions may carry out work on and with the pump!

---

## 2.4 PERSONNEL QUALIFICATION

Certain activities require the personnel carrying out the work to have certain qualifications. The following table summarises these qualifications:

Activity	Minimum qualification of personnel	
	Instructed persons with specialised training	Instructed operating personnel
Commissioning	x	
Maintenance & servicing	x	
Operation		x
Dismantling	x	
Symbol "x" authorised personnel		

## 2.5 INTENDED USE

The operational safety of the pump is only guaranteed if it is used as intended. Intended use also includes observing the operating instructions for this product and any components, as well as carrying out all maintenance and service work.

The pump may only be used as intended in accordance with the machine description and the technical data.

The intended use is summarised below:

- Conveying any other gases, in particular hazardous substances, is not permitted and prohibited.
- The permissible technical parameters must be complied with.
- The pump must not be operated in potentially explosive atmospheres.
- The pump must be protected from the weather.
- The manufacturer must be consulted for any operation outside the technical parameters specified in the product data sheet.
- The pump evacuates air to a vacuum in accordance with chapter 9.2



### ATTENTION

Only use the pump for its intended purpose and in a technically safe condition!

This is the only way to guarantee the operational safety of the pump!

## 2.6 UNAUTHORISED USE

The incorrect applications listed below are not permitted and pose a risk to people and machinery. In particular

- the evacuation of hazardous substances, in particular flammable, explosive or toxic gases
- use in potentially explosive environments (explosive gas/vapour/mist/air mixtures or dust/air mixtures or hybrid mixtures of air and flammable substances)
- Use of the pump in non-commercial applications
- operating the pump when it is not fully assembled
- operation with back pressures on the outlet side above the permissible parameters according to the product data sheet (9.2)

## 2.7 PROTECTIVE MEASURES FOR USERS

Personal protective equipment must be worn when working on the pump in order to minimise health hazards.

The protective equipment required for the respective work must always be worn during work.

Instructions on personal protective equipment displayed in the work area must be followed.



### WARNING

**Risk of injury to hands due to crushing, cutting and high temperatures**

Hand protection in accordance with the glove plan must be worn during all work on the pump.

**HINT**

The hand protection must be provided by the operator, must be suitable for the activities to be carried out and must comply with the applicable standards (e.g. EN 388).

**WARNING****Risk of injury to feet from crushing and falling objects**

Foot protection must be worn during all work on the pump.

**HINT**

The foot protection must be provided by the operator, must be suitable for the activities to be carried out and must comply with the applicable standards (e.g. DIN EN ISO 20345).

**WARNING****Hearing damage due to high volume**

Hearing protection must be worn during activities that must be carried out while the pump is running.

**HINT**

Hearing protection must be provided by the operator, must be suitable for the noise levels generated and must comply with the applicable standards (e.g. DIN EN 352).

**WARNING****Eye injuries due to flying particles**

Eye protection must be worn during all cleaning work on the pump.

**HINT**

Eye protection must be provided by the operator, must be suitable for the activities to be carried out and must comply with the applicable standards (e.g. EN 166).

**WARNING****Health damage to the respiratory tract caused by pollutants and particles**

Respiratory protection must be worn during all cleaning work on the pump.

**HINT**

Respiratory protection must be provided by the operator, must be suitable for the resulting air pollution and must comply with the applicable standards (e.g. DIN EN 143, filter class FFP2).

## 2.8 INFORMATION ON RESIDUAL RISKS

The pump is built in accordance with the current state of the art and recognised safety regulations. When using the pump, health hazards for persons working directly with the pump and third parties cannot be ruled out.

## 2.9 SAFETY INSTRUCTIONS

The dangers and risks in the respective life phases of the pump are described below. The following hazard warnings must be observed.

**DANGER****Danger to life due to defective, dismantled and manipulated protective devices**

The pump may only be operated if all safety and protective devices are in place and fully functional!

Faulty safety and protective equipment can lead to dangerous situations!

For this reason:

1. Switch off the pump immediately,
2. Secure against restarting and
3. Disconnect from air supply and electrical power!

**DANGER****Danger to life due to electric shock****Personnel qualification**

Work and tasks on the electrical system may only be carried out by qualified electricians who can demonstrate that they have successfully completed recognised training in the relevant specialist area and have been instructed in the special technical features of the pump.

Without exception, persons who do not fulfil the above conditions are prohibited from carrying out electrical work, including the simplest auxiliary activities.

To carry out tasks and activities on the electrical system of the pump, work must be carried out in accordance with the five safety rules as per DIN VDE 0105.

**DANGER****Danger to life due to electric shock****Measures in the event of damage to the electrical installation**

Damage to the electrical installation and contact with live parts can be life-threatening.

The following measures are therefore mandatory:

- In the event of damage to the electrical installation, switch off the pump immediately and inform the responsible organisation.
- Repairs must be carried out by a qualified electrician.

**DANGER****Danger to life due to unexpected start-up****Countermeasures**

The following steps must be followed when preparing for servicing and maintenance work:

1. Switch off the pump and all attached assemblies.
2. Disconnect the pump from the supply voltage and proceed in accordance with the five safety rules (VDE105).
3. Disconnect the pump from the air supply.

**DANGER****Fire and danger to life due to insufficient distance to neighbouring parts**

If the pump is enclosed, minimum distances to the product must be maintained to prevent potential fires.

Information on minimum distances can be found in chapter 6 "Installation and commissioning".

**DANGER****Danger to life due to arcing and creepage distance when disconnecting plug connections**

Always switch off the power supply before disconnecting plug connections.

**WARNING****Risk of injury! Risk of crushing in the hand and arm area due to product assembly**

If assembly work is carried out, the employee must be trained in the use of lifting equipment and have provided proof of this. Use suitable protective equipment!

**WARNING****Risk of injury due to incorrect lifting conditions**

If assembly work is carried out, the employee must be trained in the use of lifting equipment and have provided proof of this.

The pump may only be lifted in accordance with the specifications (see chapter 5 "Transport").

**WARNING****Safety risk when leaving the operating parameters**

Safe operation of the pump can no longer be guaranteed outside the permitted operating parameters. The limits of the permissible operating parameters are shown in the chapter 9.2.

**WARNING****Safety risk due to spare parts not approved by the manufacturer**

Gebr. Becker Spare parts have been checked by us for their technical requirements and safety. Unapproved spare parts can pose a danger to people and the pump.

**WARNING****Danger from hot components and equipment**

Media and pump parts can reach high temperatures during operation. Before intervening manually in the pump, it is therefore necessary to wait until it has cooled down before working safely with protective gloves to avoid burns and scalding.

**WARNING****Risk of injury due to stored residual energy**

The occurrence of residual mechanical, pneumatic and electrical energy on the pump after actuating the operating element for stopping in an emergency or after switching off the pump must be taken into account!

**WARNING****Risk of injury due to slipping, tripping and falling**

The operator of the pump is responsible for traffic safety. If operating fluids leak from the pump, the areas must be cordoned off and labelled accordingly and suitable measures must be taken.

**WARNING****Environmental hazards due to hazardous substances**

The operating materials (especially oils) must not be disposed of in the environment. Disposal must comply with the requirements for the disposal of hazardous substances and the Waste Oil Ordinance (AltöIV).

**CAUTION****Contamination and damage to the environment due to operating materials**

The operating fluids used for the proper functioning of the pump and water contaminated with these operating fluids can pose a risk to the environment.

Suitable absorbents must always be kept ready to ensure the rapid absorption of leaked operating materials and contaminated water.

Used absorbents must always be disposed of in accordance with the prescribed procedures.

All environmental protection regulations must always be observed when handling and disposing of operating materials.

Operating materials and contaminated water must be disposed of in accordance with local environmental protection regulations.

**HINT****Wear safety shoes**

Foot protection must be worn during all work on the pump.

**HINT****Wear protective gloves**

The pump must be allowed to cool down until it is safe to carry out work with protective gloves.

If this time cannot be guaranteed, protective gloves with adequate heat protection must be used. The exact model can be found in the operator's glove plan.

**HINT****Wear chemical protective gloves**

Caution: Risk of scalding from hot oil!

## 2.10 BEHAVIOUR IN THE EVENT OF DANGER AND ACCIDENTS

The protective measures to be taken and the responsibility for drawing up an occupational safety concept lie with the operator of the workplace.

The operator must ensure safe use through the "Operating conditions" described in chapter 3.

## 2.11 REQUIREMENTS FOR STABILITY

The pump fulfils the requirements for stability in accordance with DIN EN 1012-2.

In order not to jeopardise the continuous oil supply, the pump must be installed as horizontally as possible (max. inclination: 1° in all directions) on a level surface.

The pump must be installed horizontally on a level surface.

If the pump is installed on an inclined plane, oil circulation can no longer be guaranteed. This leads to damage to the pump.

## 2.12 OCCUPATIONAL SAFETY

The pump has been set up in accordance with the Machinery Directive 2006/42/EC and the relevant health and safety and accident prevention regulations. Before starting repair work, the pump must be de-energised and depressurised to prevent accidents. Previously removed protective devices must be refitted before commissioning.

## 2.13 AIRBORNE NOISE EMISSIONS

According to Directive 2006/42/EC, information on the airborne noise emission of the pump must be provided. Detailed information can be found in the Machinery Directive under point 1.7.4.2.

Information on the pump in this regard can be found in the chapter 9.2 "Operating parameters".

## 2.14 ERGONOMICS

With regard to maintenance and servicing, special behaviour with regard to ergonomics must be taken into account in accordance with Directive 2006/42/EC Annex i 1.1.6 "Ergonomics":

- The pump must not be lifted using muscle power. A hoist must always be used.

### 3 OPERATING CONDITIONS

The CE conformity of the product only becomes legally valid when all product safety requirements of the "operating conditions" formulated in this chapter within the meaning of Directive 2006/42/EC Annex I 1.7.4.2.i have been fully realised by the operator. Only in this case is CE conformity valid and the pump may be operated.

#### **Operating condition 1: Safety instructions for maintenance work**

##### **1. Standalone products - not implemented in a control system**

Shutting down the pump for maintenance

In the event of maintenance, work must be carried out with the protective devices removed. This work may only be carried out when the pump is at a standstill. To ensure the safe shutdown of the pump, the pump must be disconnected from the power supply and the five safety rules in accordance with DIN VDE 0105 must be observed.

##### **2. Implemented products - product is controlled via the operator's control system**

If the pump is implemented in a control system by the operator, the following conditions apply for the "Maintenance" operating mode:

- The drive must be de-energised
- Or, in the case of a shutdown stored in the control system, comply with the requirements of DIN EN 61800-1.

#### **Operating condition 2: Measures against unexpected start-up**

Energy separation:

Before carrying out any servicing or maintenance work or interfering with the product, it must be manually disconnected from the energy source in accordance with DIN EN ISO 14118, section 4.2.

#### **Operating condition 3: Ventilation of the operating room**

The operator must design the operating room in such a way that the atmospheric air pressure is maintained even in the event of a product fault.

This prevents negative pressure from leading to physical injury or escape routes being blocked by blocked doors.

#### **Operating condition 4: Behaviour when leaving the operating parameters**

If the pump deviates noticeably from the usual operating parameters, it must be switched off immediately and maintenance carried out.

Operation outside the specified operating parameters is prohibited by the manufacturer.

#### **Operating condition 5: Permitted operating materials (process media)**

The permissible operating materials are defined within the scope of the intended use.

It is prohibited to convey hazardous substances - especially pyrophoric substances - as this cannot rule out the possibility of ignition of an explosive atmosphere on hot surfaces.

#### **Operating condition 6: Permitted lubricants**

The approved lubricants are listed in chapter 9.3.

#### **Operating condition 7: Electrical protection of the motor**

The motor must be protected using state-of-the-art technology. At least one motor protection switch and separate temperature monitoring are required.

Temperature monitoring based solely on plausibility checks of the current consumption is not permitted.

#### **Operating condition 8: Dimensioning the electrical supply line**

Unless otherwise specified by the operator, the supplier of the electrical equipment is not responsible for providing the supply line and the overcurrent protection device.

#### **Operating condition 9: Command device for stopping**

The pump must have a device with which it can be completely shut down safely.

Each workstation is equipped with a control device which - depending on the hazard - switches off individual or all functions of the pump in order to establish a safe state.

- The stop command has priority over any start command.
- After shutting down, the power supplies to the drives concerned must be disconnected.
- It must not be possible to overwrite or undo a shutdown command that has been issued.

#### **Operating condition 10: Command device for emergency shutdown**

The pump must be equipped with at least one EMERGENCY STOP command device. If necessary, several devices must be provided to ensure a safe shutdown in an emergency.

**Operating condition 11: Disconnection from the power source by main switch**

The pump must be equipped with devices with which it can be safely disconnected from any energy source.

These devices must be clearly labelled and lockable if reconnection could pose a danger to persons.

Lockability is also required if the operating personnel cannot monitor the permanent interruption of the energy supply from every access point.

**Operating condition 12: Ensuring cooling**

The cooling volume flow must be unhindered on both the intake and exhaust sides.

Contamination (dust in the operating room) can lead to deposits on the pump, which can impair cooling. The operator must ensure that the pump is cleaned regularly.

**Operating condition 13: Ensuring unobstructed exhaust air**


As standard, the evacuated air is discharged from the pump directly into the environment. Optionally, the exhaust air can be discharged via a connected exhaust air pipe. In this case, it is essential to ensure that the exhaust air can flow through the exhaust air duct unhindered and without significant back pressure (< 100 mbar).

## 4 PUMP DESCRIPTION

This chapter explains the assemblies and components of the pump and how they work.

The following information is intended to help you understand the operation of the pump. This information can help to avoid dangers and errors due to incorrect operation.

### 4.1 GENERAL DESCRIPTION OF THE PUMP

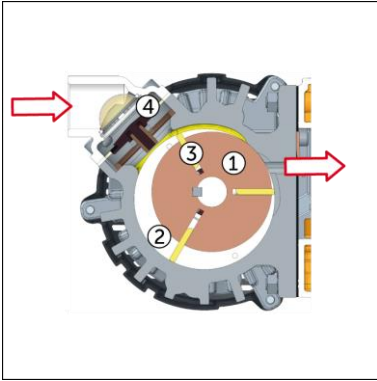

The pump is a classic oil-lubricated rotary vane vacuum pump.

It consists of a housing, the eccentrically installed rotor (1), the radially moving vanes (3) and the inlet and outlet.

There is a non-return valve (4) in the connection flange, which is only open during operation.

When the rotor turns, gas flows into the expanding chamber (2) until it is shut off by the next slide valve. The trapped gas is then compressed until the outlet valve opens against atmospheric pressure. The vacuum generated draws oil into the scoop chamber, which lubricates and seals the vanes. The oil required for compression is then separated again via air/oil separators.

### 4.2 SIZES

Several pumps of different sizes are listed in these operating instructions, as they

- work according to the same active principle,
- have the same intended use,
- are subject to the same legal and standardisation requirements,
- have a similar design,
- have similar physical characteristics,
- and are also very similar in terms of maintenance, service and commissioning.

### 4.3 VARIANTS




#### HINT


Larger oil tanks with more oil and the use of oil coolers have a positive effect on the oil service life. This results in longer maintenance intervals (see chapter 8.2 "Maintenance intervals").

#### 4.3.1 VARIANTS O 5.10-O 5.25


Within the O 5.10-O 5.25 series, a distinction is made between 3 variants.

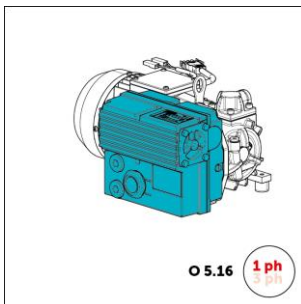

O 5.XX, with short oil tank

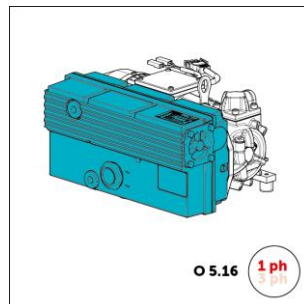


O 5.XX, with oil tank

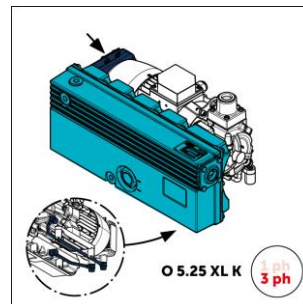


O 5.XX XL K, with long XL oil tank  
+ oil cooler

#### 4.3.2 VARIANTS U 5.40


Within the U 5.40 series, a distinction is made between 3 variants.

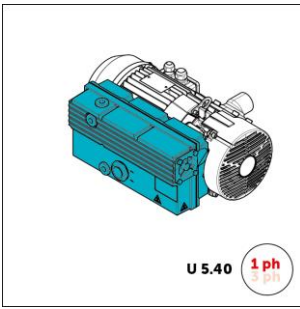

U 5.40, with oil tank

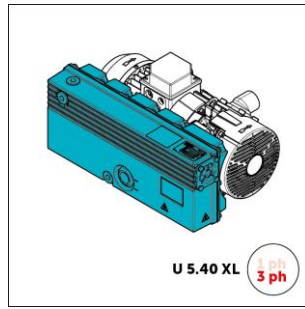


U 5.40 XL, with long XL oil tank

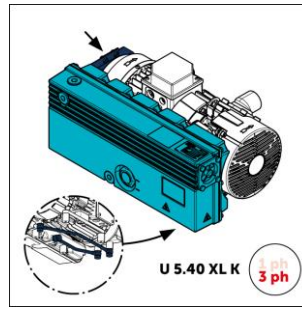

U 5.40 XL K, with long XL oil tank + oil cooler

## 4.4 COMPONENTS

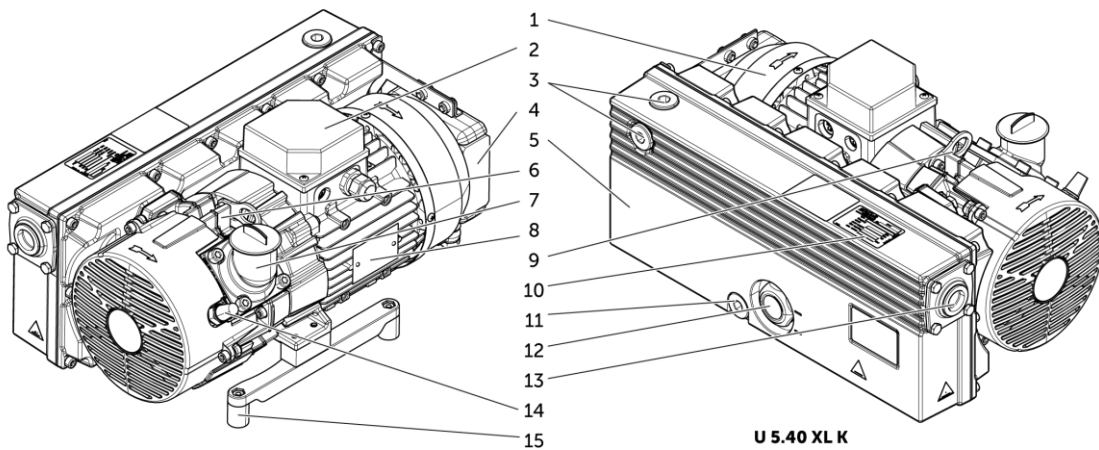

Position	Component	Function
1	Engine	Drive
2	Terminal box	Electrical connection for customers
3	Screw plugs	Oil filler plug(s)
4	Oil cooler	Temperature reduction
5	Oil reservoir	Oil reservoir includes oil tank, oil filler plug, oil sight glass, oil drain plug and oil separator (air/oil separator)
6	Pump unit	Generation of the vacuum; the pump unit includes pump housing, piston and slide valve
7	Connection flange incl. non-return valve	Suction connection, prevention of backflow of process air / oil into the application
8	Motor rating plate	Conformity markings and technical data - Motor
9	Transport device	Attachment point
10	Type plate	Conformity markings and technical data - Pump
11	Screw plug	Oil drain plug
12	Oil sight glass	Oil level indicator
13	Maintenance cover	Gas outlet, access to air/oil separator (optionally with exhaust air connection)
14	Gas ballast valve	Improvement in water vapour compatibility
15	Device base / rubber buffer	Stable installation and fastening of the pump

Table: Components

## 4.5 MOTORS

The characteristics of the motor used can be found on the motor rating plate.

## 4.6 SAFETY AND PROTECTIVE EQUIPMENT



### DANGER

Danger to life due to defective, dismantled and manipulated protective devices



### HINT

For a detailed description of the safety instructions, see chapter 2 "Basic safety instructions".

The pump's protective devices must not be dismantled, modified or put out of operation. The pump must be shut down and secured immediately if any protective devices have been removed, modified or taken out of operation.

Defects in protective devices must be rectified immediately. All protective devices must be undamaged, fully assembled and functional. Warning and information signs must be clearly visible.

All protective devices must be checked for functionality, damage and completeness after each maintenance of the pump.

If a maintenance activity requires the dismantling of protective devices, these may only be dismantled for the duration of the maintenance activity. Immediately after completion of the maintenance work, all protective devices must be fully installed at the intended location and checked for proper functioning.


The prescribed inspection intervals for protective devices must be observed and complied with. Protective devices may only be maintained, replaced and serviced by trained, instructed and authorised specialist personnel.

Unauthorised tampering with or manipulation of the safety-related parts of the pump is strictly prohibited and must be reported immediately to the responsible department.

All safety and accident prevention equipment, such as warning and information signs, covers, protective panelling, etc., must be in place. The removal or modification of these devices is prohibited.

Damaged equipment must be repaired immediately.

An overview of the pump with the designations of the protective devices is shown below.

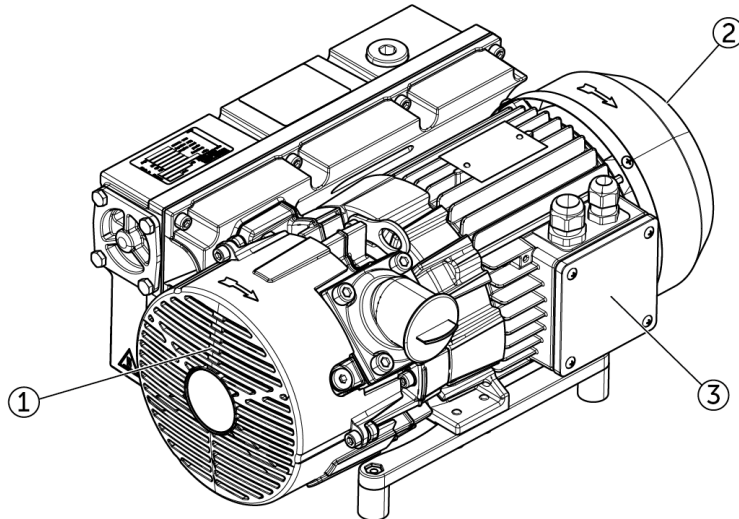

Position	Component	Place
1	Pump fan guard	Front of the unit
2	Motor fan cowl	Front side of the motor
3	Terminal box cover	Cover side of the terminal box

Table: Protective devices

## 4.7 TESTING THE SAFETY AND PROTECTIVE EQUIPMENT

---



### HINT

All safety and protective equipment must be checked regularly.  
For maintenance intervals, see chapter 8.1

---

The condition and function of safety and protective equipment must be checked if:

- modifications and repairs have been carried out on the pump
- Damage has occurred to the pump
- service and maintenance intervals are to be carried out

## 4.8 OPERATING MATERIALS AND CHEMICALS

---



### CAUTION

Contamination and damage to the environment due to operating materials



### HINT

Description of the safety instructions. See chapter 2.9 "Safety instructions"

---

## 5 TRANSPORT



### WARNING

Risk of injury due to incorrect lifting conditions




### HINT

For a detailed description of the safety instructions, see chapter 2 "Basic safety instructions".



### HINT

Wear suitable PPE

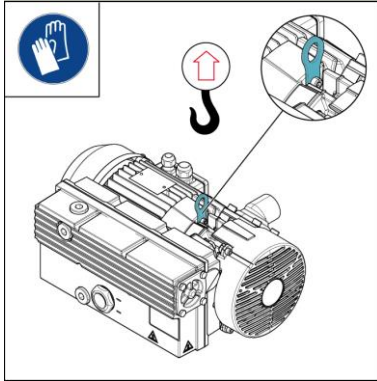


The pump may only be attached to the lifting eye. The following must be observed:

- Select the hoist according to the total weight to be transported. See chapter 9.2 (operating parameter weights)
- Secure the pump against tipping and falling.
- Always suspend the pump from all available load suspension devices.
- Do not stand under suspended loads.
- Place the transported goods on a horizontal surface (max. inclination: 10° in all directions).

## 6 INSTALLATION AND COMMISSIONING

### 6.1 GENERAL REQUIREMENTS

To ensure that the continuous oil supply is not jeopardised, the pump must be installed as horizontally as possible (max. inclination: 1° in all directions) on a level surface.

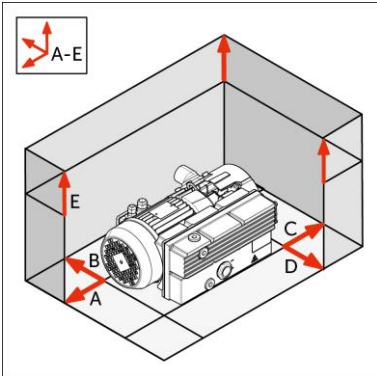

The installation location of the pump should be dry and protected from splashing water.

We recommend setting up the pump so that maintenance work can be carried out easily. Depending on the type of variant or accessories fitted, additional clearance may be required for this.

The following points must be observed when installing components and assemblies in order to avoid injuries and damage to the pump:

- Components from third-party manufacturers may only be installed if they have been approved by the manufacturer and comply with the directives and laws applicable in the country of use.
- Loose and non-pump parts must be removed from the pump environment after installation.
- Protruding parts (pipes, cables, etc.) must be properly installed, laid and labelled.
- Contact points of components must be clean and intact.

A	B	C	D	E
10 cm	10 cm	10 cm	10 cm	10 cm

Table: Minimum distances



#### ATTENTION

##### Compliance with the minimum distance

Safe operation of the pump can no longer be guaranteed outside the permitted operating parameters (for permitted operating parameters, see Chap. 9.2).

The minimum distance between the pump and all neighbouring parts must be observed in accordance with the following table. Failure to observe the minimum distances can lead to a fire risk due to the high level of heat emitted.



#### ATTENTION

##### Note the angle of inclination!

The pump must be installed horizontally on a level surface. If the pump is installed on a sloping surface (> 1°), oil circulation can no longer be guaranteed. This will result in damage to the appliance.



#### HINT

##### FASTENING TO THE SUBSTRATE

The pump can be installed on solid ground without anchoring. If the pump is installed on a substructure, we recommend using elastic buffer elements to secure it.

Dynamic installation is not permitted with these pumps!

### 6.2 PREPARATORY ACTIVITIES


#### 6.2.1 FILL WITH OIL



#### ATTENTION

##### The pump is supplied without oil.

Before commissioning, oil must first be filled in.

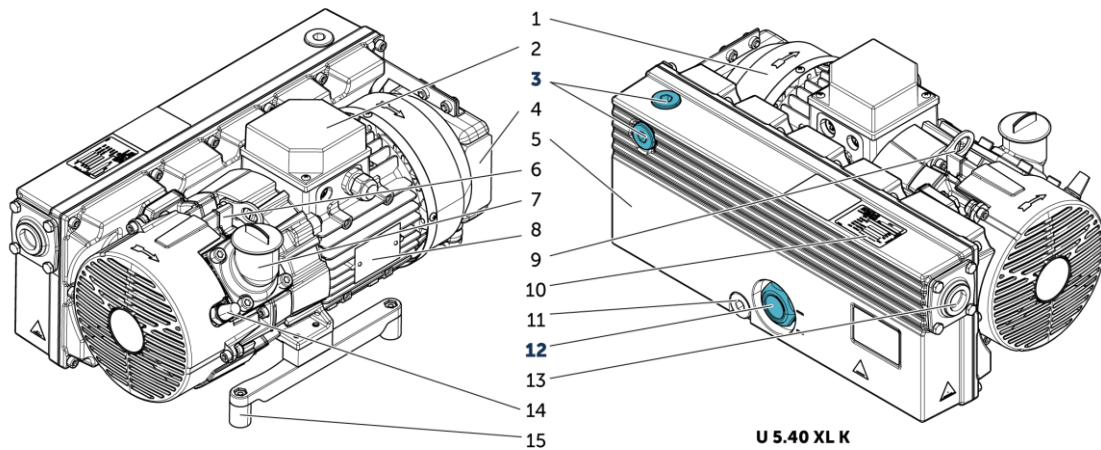**HINT**

For information on oil types and filling quantities, see chapter 9.3

1. Unscrew the screw plug (Pos.3) at the top or side of the oil tank
2. Fill with oil. The oil level must not exceed the maximum fill level (upper fill line next to the oil sight glass (pos. 12))
3. Close the screw plug again

### 6.2.2 CONNECTING THE MEDIA LINE

**WARNING**

When installing media lines that have a high temperature, please note that they must be covered, insulated and labelled accordingly to prevent injury and pump damage.

**Remove the sealing plug**

The suction connection (pos. 7) is protected against the ingress of dirt and foreign bodies during transport with a sealing plug. This must be removed before commissioning.

**Dimensioning the suction line**

The diameter of the suction line depends on the pump size and the line length.

There is an internal thread in the connection flange. Cables with a diameter at least corresponding to the nominal connection diameter of the connecting flange must be used in accordance with the following table.

Size	O 5.10	O 5.16	O 5.21	O 5.25	U 5.40
Connection	G ½	G ½	G ½	G ¾	G 1
Cable cross-section (MIN), length ≤ 2m	13 mm	13 mm	13 mm	19 mm	25 mm
Cable cross-section (MIN), length > 2m	19 mm	19 mm	19 mm	25 mm	32 mm

Table: Suction - Sizes O 5.10-5.25, U 5.40

Keep connections free of oil, grease, water and other soiling.

The supply line must be installed mechanically stress-free using a flexible hose or rigid pipe.

**Exhaust air**

The exhaust air is discharged via the maintenance cover (pos. 13). A maintenance cover with integrated exhaust air flange (G ¾ internal thread) is optionally available for this purpose.

- The drain must be installed mechanically stress-free using a flexible hose or rigid pipe.
- It must be ensured that the exhaust air can flow out without major back pressure (see chapter unzulässiger Gebrauch).
- At high exhaust air temperatures, the exhaust air duct must be designed in such a way that it does not pose any danger.

**CAUTION**

Low residual quantities of oil in the exhaust air.

Ensure adequate ventilation of the rooms to minimise a possible health risk to people.

**Optional pre-filter****ATTENTION**

Penetration of foreign bodies or liquids

Depending on the application and the associated air quality, an ultra-fine or coarse filter must be installed upstream of the pump.

**6.3 ELECTRICAL INSTALLATION****DANGER**

Danger to life due to electric shock - Personnel qualification

**DANGER**

Danger to life due to defective, dismantled and manipulated protective devices

**DANGER**

Danger to life due to unexpected start-up

**HINT**

For a detailed description of the safety instructions, see chapter 2 "Basic safety instructions".


The electrical installation of the pump must comply with the requirements of Directive 2006/42/EC and EN 60204.

If the pump is integrated into a control system, it must be ensured that the pump does not restart automatically after an unintentional voltage drop. The measures against unexpected start-up in accordance with DIN EN ISO 14118 must be realised. This also applies after a shutdown following an emergency stop.

The following points must be observed when installing the pump:

The pump may be operated with a maximum of 60 start/stop cycles per hour.

- The pump supply line must meet the minimum requirements of the state of the art.

**6.3.1 ELECTRICAL CONNECTION****Connecting the 3~motor**

The motor must be connected according to the wiring diagram (see terminal box cover or instruction leaflet in the terminal box).


The following points must be observed when installing the pump:


- The permissible connection types of the motor can be found on the motor rating plate.
- The pump must be protected by an overload protection (motor protection switch). Operation without appropriate protection is prohibited.

**Authorised direction of rotation of the pump**

Before commissioning, check that the pump is rotating in the prescribed direction. To do this, only start the pump briefly (max. 3 seconds), as operation in the wrong direction of rotation will damage the pump.

If the pump does not run in the specified direction of rotation (looking at the motor's fan wheel), this must be changed by swapping two connection phases.

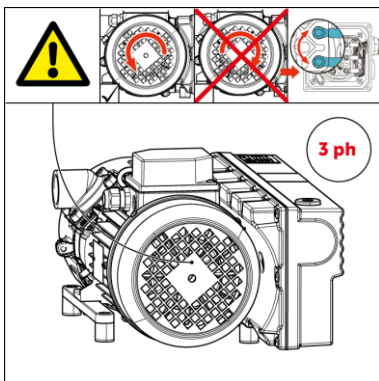

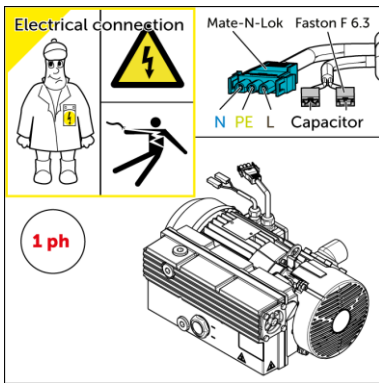

### Connecting the 1~motor

The motor must be connected according to the wiring diagram (see terminal box cover or instruction leaflet in the terminal box).

The following points must be observed when installing the pump:

- The permissible connection types of the motor can be found on the motor rating plate.

### Connecting the 1~ motor (O 5.10-O 5.25)

In most cases, the motor should be connected as shown in the diagram opposite (plug connection). Otherwise, observe the connection diagram in the terminal box.



#### ATTENTION

Capacitors of single-phase motors with touchable contact points may only be used if they are arranged within enclosures in such a way that protection to the active parts of at least IP2X or IPXXB in accordance with IEC60529 is achieved.

The accessibility conditions must comply with the requirements of EN60204-1 chapter 6.2, in particular sections 6.2.2 and 6.2.4.

## 6.4 SWITCH ON THE PUMP

The pump is switched on via switching elements in the application. After switching on, the pump switches directly to normal operating mode. There are no subordinate operating modes for set-up, maintenance or troubleshooting.

The pump may only be switched on when it has been properly installed, the electrical connection has been made correctly and the media lines have been connected.

## 6.5 NORMAL OPERATION

In normal operation, the pump operates fully automatically within its physical limits, in accordance with the customer's control system.

## 6.6 SWITCH OFF THE PUMP

### 1. shutdown

To switch off, the pump must be shut down from the application and secured against being switched on again.

In addition, a warning sign must be attached to the mains disconnection device.

All electrical equipment must be disconnected individually. Maintenance during operation or when the pump is switched on is strictly prohibited.

### 2. disconnection from the power supply

A qualified electrician switches the motor off and disconnects it. After carrying out the 5 safety rules, non-qualified electricians may also carry out work on the pump.

After completion of the activities, the activities under the point: "Recommissioning" must be followed.

## 6.7 RECOMMISSIONING

After the storage and shutdown period, the pump must be checked to ensure that it is operational. If it is not operational, appropriate maintenance and servicing measures must be carried out to restore its operational capability.

The following points must be worked through in the specified order to enable the pump to be safely recommissioned:

1. The pump must be serviced, cleaned and, if necessary, repaired in accordance with the chapters "Servicing and maintenance" and "Cleaning".
2. The electrical connection must be carried out in accordance with chapter 6.3. The power supply must not yet be restored.
3. All safety devices must be fitted and checked for functionality and effectiveness. Damaged parts must be replaced immediately.

After completing the above points and taking into account the section "Switching on the pump", see chapter 6.4, the pump can be put back into operation.

## 7 TROUBLESHOOTING/TROUBLESHOOTING

---



### DANGER

Danger to life due to electric shock - Personnel qualification



### DANGER

Danger to life due to defective, dismantled and manipulated protective devices



### DANGER

Danger to life due to unexpected start-up



### WARNING

Danger from hot components and equipment



### WARNING

Risk of injury due to slipping, tripping



### HINT

For a detailed description of the safety instructions, see chapter 2 "Basic safety instructions".

---

If troubleshooting is carried out immediately after operation, the cooling time must be observed.

Troubleshooting on the pump is only permitted under the following conditions:

#### Shutdown

For troubleshooting, the pump must be shut down and secured against being switched on again. In addition, a warning sign must be attached to the mains disconnection device.

All existing electrical equipment must be individually disconnected.

If safety devices have to be dismantled or modified for troubleshooting purposes, they must be refitted, adjusted and tested after the maintenance and servicing work has been completed and before the pump is started.

A qualified electrician may then carry out work on the pump.

Once the work has been completed, the pump may be put back into operation after a visual inspection.

When troubleshooting, check the pump for defects in particular.

- Damage, in particular to:
  - Ventilation grilles
  - Screw connections
  - Media lines
  - Electrical cables
- Leaks
- Loose objects
- Loose screw connections or fastenings
- Contact protection on live parts.



### HINT

Visual inspection: The pump is free of foreign objects. After an initial inspection, the pump is free of damage. This also includes checking the electrical and pneumatic components and connections.

Instruct unauthorised persons to leave the pump.

---

If defects and hazards become apparent during the inspection, the pump must be shut down immediately. The pump may only be put into operation if it is in perfect condition.

The chapter 8.1 "Maintenance and servicing" must be followed.

### 7.1 FAULT TABLES

The following tables describe possible causes of faults and the activities required to rectify them. In the event of faults that cannot be rectified using the following instructions, please contact Gebr. Becker.

The pump does not reach the required vacuum		
Possible cause	Review	Troubleshooting
Leakage in the supply line	Visual inspection of the supply line elements (e.g. pipework, fitting, hose clamps)	Replacing the faulty supply line elements
Strainer in the intake manifold is clogged	Check strainer for soiling. If this occurs repeatedly, check the suction line for soiling if necessary.	Clean / replace strainer
Resistance in the supply line too high	Check the dimensions of the supply line	Carry out dimensioning in accordance with the operating instructions. Further support from BECKER Service
Resistance in the supply line too high	Check supply lines for blockages, kinks and deformations	Remove foreign objects from the media line. Repair supply lines if necessary
Resistance in the supply line too high	Check throttle elements for opening condition	Open throttle elements if necessary
The motor runs in the wrong direction of rotation if the pump does not prime correctly and emits loud noises.	Check the direction of rotation using the direction of rotation arrow	The motor installation must be corrected by a qualified electrician.
Oil level insufficient	Visual inspection of the oil sight glass when the pump is at a standstill	The oil recommended by the manufacturer must be adjusted to the correct level.
Water/condensate in the oil	Check oil for condensate residue	Change the oil.

Table: Fault tables: The pump does not reach the required vacuum

The pump does not start		
Possible cause	Review	Troubleshooting
Supply voltage is not present	Check electrical protective devices (e.g. motor protection switch, fuses, emergency stop)	rectify the identified fault by a qualified electrician
Supply voltage is not present	Check electrical connection cable	Repairing the connecting cable
Supply voltage is not present	Check the electrical connection	Identified fault rectified by a qualified electrician
Pump mechanically blocked	Exclude electrical causes; check the free movement of the motor fan (with a screwdriver)	Contact BECKER Service

Table: Fault tables: The pump does not start

The pump becomes unusually hot		
Possible cause	Review	Troubleshooting
Motor/appliance fan damaged or clogged	Visual inspection for visual damage; listen for unusual noises (e.g. grinding noises)	The pump must be safely shut down or disconnected from the supply voltage by a qualified electrician. The "fan cover" protective device must be removed and the fan wheel cleaned of dirt or replaced if damaged.
Air/oil separator clogged	If an optional maintenance indicator is installed, a blockage can be detected during operation due to the increased back pressure	The pump must be shut down for safety reasons or disconnected from the power supply by a qualified electrician. The air/oil separator must be replaced at the specified interval.
Strainer in the intake manifold is clogged	Check strainer for soiling; if this occurs repeatedly, check the suction line for soiling if necessary	Clean / replace strainer
Temperature of the evacuated gas is too high	Measure the temperature of the evacuated gas and compare it with the permitted maximum temperature (chapter 9.2)	This temperature limit must be observed.
Ambient temperature of the pump is too high	Measure ambient temperature	Sufficient ventilation and compliance with the minimum distances must be checked and ensured.

Table: Fault tables: The pump becomes unusually hot

## 8 MAINTENANCE, SERVICING AND DISMANTLING

---



### **DANGER**

Danger to life due to electric shock - Personnel qualification



### **DANGER**

Danger to life due to defective, dismantled and manipulated protective devices



### **WARNING**

Danger from hot components and equipment



### **CAUTION**

Contamination and damage to the environment due to operating materials



### **HINT**

For a detailed description of the safety instructions, see chapter 2 "Basic safety instructions".



### **HINT**

Wear suitable PPE

---

If a maintenance activity requires the dismantling of protective devices, these may only be dismantled for the duration of the maintenance activity. Immediately after completion of the maintenance work, all protective devices must be fully installed in the designated position and checked for proper functioning.

The prescribed inspection intervals for protective devices must be observed and complied with. Protective devices may only be maintained, replaced and serviced by trained, instructed and authorised specialist personnel.

Safety-related parts of the pump could be damaged or disabled by unauthorised tampering or manipulation. Unauthorised tampering and manipulation of the safety-related parts of the pump, adjustable components, is strictly prohibited and must be reported immediately to the responsible body.


### 8.1 MAINTENANCE AND SERVICING

As a prerequisite for safe and proper operation, it is essential that the pump is serviced and maintained by suitably qualified personnel at regular intervals.

The service life of the pump stands and falls with regular maintenance. Other factors are to be found in the operating conditions to which the pump is exposed. In unfavourable conditions, it may be necessary to significantly reduce the maintenance intervals and the time of inspection.

### 8.2 MAINTENANCE INTERVALS

The maintenance intervals are shown in the following overview:

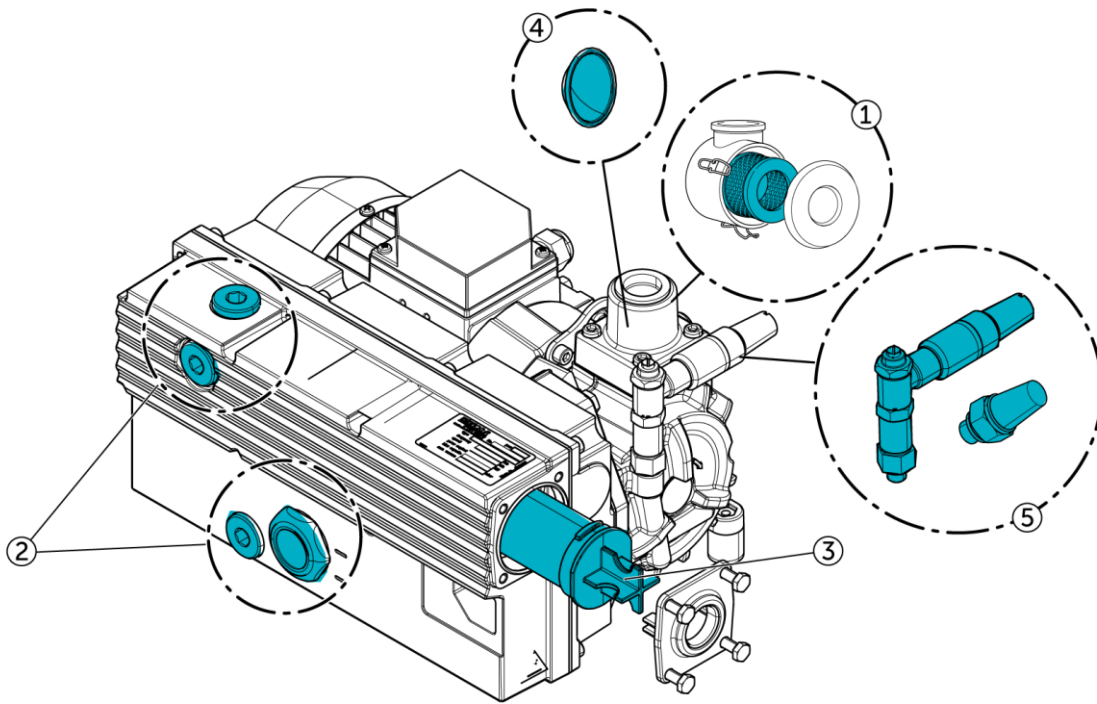

8.2.1 MAINTENANCE INTERVALS O 5.10-O 5.25 (SHORT OIL TANK)

Component	40 h	40 - 200 h	1500 h (min. 2x/1a)	6000 h	20000 h (min. 1x/5a)
Intake filter (1)		check, clean, (switch)			
Oil (2)	Check level		change		
Air Effluent Element (LEE) (3)			change		
Suction strainer (4)			clean		
Gas ballast valve filter (5)				change	
Housing		clean			
General overhaul					execute
Protective devices		Visual inspection			

Table: Maintenance intervals

8.2.2 MAINTENANCE INTERVALS O 5.10-O 5.25 (LONG OIL TANK)

Component	40 h	40 - 200 h	2000 h (min. 2x/1a)	6000 h	20000 h (min. 1x/5a)
Intake filter (1)		(switch), check, clean			
Oil (2)	Check level		change		
Air Effluent Element (LEE) (3)			change		
Suction strainer (4)			clean		
Gas ballast valve filter (5)				change	
Housing		clean			
General overhaul					execute
Protective devices		Visual inspection			

Table: Maintenance intervals

8.2.3 MAINTENANCE INTERVALS U 5.40

Component	40 h	40 - 200 h	1500 h (min. 2x/1a)	6000 h	20000 h (min. 1x/5a)
Intake filter (1)		check, clean, (switch)			
Oil (2)	Check level		change		
Air Effluent Element (LEE) (3)			change		
Suction strainer (4)			clean		
Gas ballast valve filter (5)				change	
Housing		clean			
General overhaul					execute
Protective devices		Visual inspection			

Table: Maintenance intervals

## 8.2.4 MAINTENANCE INTERVALS U 5.40 XL AND U 5.40 XL K

Component	40 h	40 - 200 h	2000 h (min. 2x/1a)	6000 h	20000 h (min. 1x/5a)
Intake filter (1)		check, clean, (switch)			
Oil (2)	Check level		change		
Air Effluent Element (LEE) (3)			change		
Intake strainer (4)			clean		
Gas ballast valve filter (5)				change	
Housing		clean			
General overhaul					execute
Oil cooler		Clean outside			
Protective devices		Visual inspection			

Table: Maintenance intervals

We are happy to support our customers in this work and in assessing the condition of the equipment with the help of our BECKER service. We always recommend an on-site consultation for large pumps.

## 8.3 PREPARATION

The responsibilities for installation, operation, maintenance and cleaning must be clearly regulated and defined.

For maintenance and servicing measures, it must be ensured that sufficient space is available for all work. The maintenance area must be secured.

The following steps must be observed when preparing for servicing and maintenance work:

1. All existing electrical equipment must be individually disconnected. Maintenance during operation or when the pump is switched on is strictly prohibited.
2. If safety devices have to be dismantled or modified, they must be refitted, adjusted and tested immediately after completion of the maintenance and servicing work and before the pump is started.
3. After this, a qualified electrician may carry out work on the pump, taking into account the 5 safety rules.

Once the work has been completed, the pump may be put back into operation after a visual inspection.

## 8.4 MAINTENANCE ACTIVITIES

**DANGER**

Danger to life due to defective, dismantled and manipulated protective devices

**WARNING**

Danger from hot components and equipment

**CAUTION**

Contamination and damage to the environment due to operating materials

**HINT**

For a detailed description of the safety instructions, see chapter 2 "Basic safety instructions".

**HINT**


Wear suitable PPE

The safety instructions must always be observed:

- Use suitable tools and handle with care.
- Personal protective equipment must be used to prevent injuries caused by tools or components.
- The maintenance area must be kept clean and tidy. Objects lying around can pose a tripping hazard.
- If anything is unclear, the responsible body or the manufacturer should be consulted.

The maintenance plan provides for the following activities:

#### 8.4.1 CLEAN SUCTION FILTER (OPTIONAL)

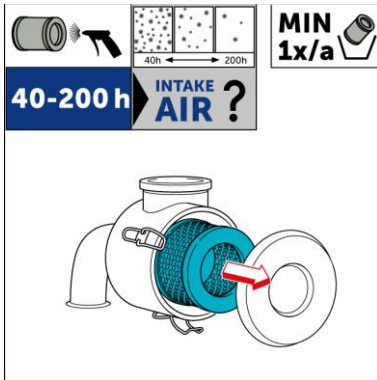

The filter cartridge becomes clogged depending on the degree of contamination of the intake air. It must be cleaned at the aforementioned intervals, but at least every 200 hours.

Protective goggles and an FFP2 mask in accordance with EN 149:2008 must be worn during cleaning.

Proceed as follows to clean the filter cartridge, depending on how it is installed:

##### 1st paper filter cartridge

- blow through with compressed air from the inside to the outside. Ensure that there is sufficient clearance, as an excessively hard air flow can damage the filter material.

##### 2. polyester filter cartridge

- First remove coarse dirt from the filter by lightly tapping it out.
- Carefully rinse the filter from the inside out with a not too hard jet of water. For stubborn dirt, we recommend soaking the filter in a mild soap-based cleaning bath.
- Shake the excess water out of the filter and allow it to dry out completely in the air. When drying with compressed air, ensure that there is sufficient distance between the filter and the air, as too hard a flow of air can damage the filter material.



#### ATTENTION

- Always allow polyester filters to dry after cleaning with water. - Risk of sticking or mould!
- Water in the pump leads to contamination of the oil and there is also a risk of corrosion!

If the function of the filter is restricted even after the cleaning process (clogged, oily, greasy or damaged), it must be replaced. It should be replaced after one year at the latest.




#### HINT

Filters are available in many sizes and designs. For further information, please contact the Gebr. Becker service

Only original spare parts from Gebr. Becker may be used.

#### 8.4.2 CLEAN THE SURFACE WITH COMPRESSED AIR

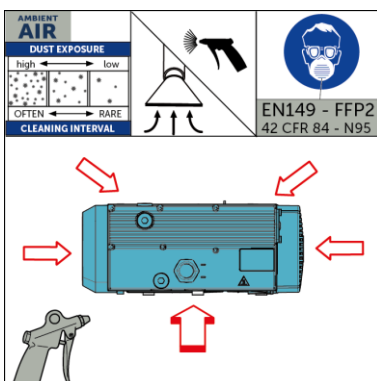


The pump must be cleaned regularly. The interval depends on the degree of soiling on the housing.

Protective goggles and an FFP2 mask in accordance with EN 149:2008 must be worn during cleaning.

##### **Clean oil cooler (XL K variant)**

Do not use compressed air to remove dirt from the cooling fins, but preferably a vacuum cleaner.

## 8.4.3 CHECK OIL LEVEL

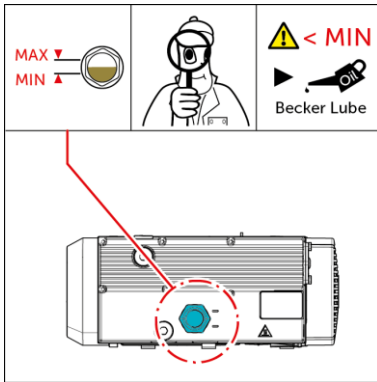

The oil level can be read off the oil sight glass after an appropriate waiting time, with the engine shut down and ventilated to atmospheric pressure.

The oil lubricates the rotary vane in the compressor chamber. The heat energy released in the process vaporises the oil into oil mist. Despite the air/oil separator (LEE) used, small quantities of oil mist are pumped out of the pump. The oil level must therefore be checked regularly and adjusted if necessary.


**!** **ATTENTION**

If the oil level is too low, this can cause damage to the vacuum pump.

**i** **HINT**

For information on oil types and filling quantities, see chapter 9.3

## 8.4.4 OIL CHANGE

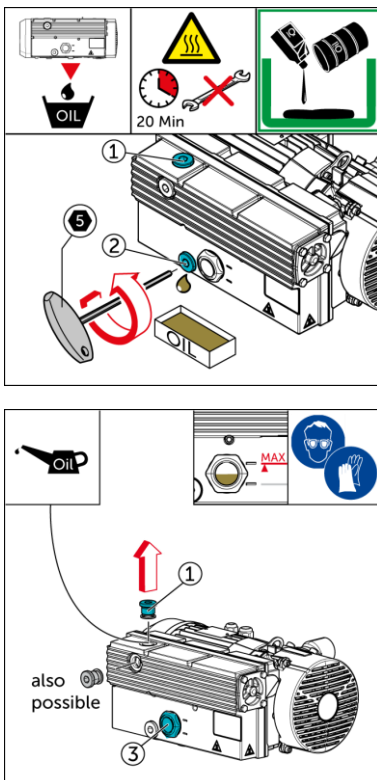


The oil seals the pump and improves its running properties. When the oil is used in the compressor chamber, it comes into direct contact with the process gas. This contaminates the oil. The pump can no longer achieve the required performance characteristics. The oil must therefore be changed at regular intervals.

1. Ensure that all requirements for maintenance operation have been met.
2. Place a container underneath to collect the used oil
3. Open the filler cap (1) on the oil filler neck for venting
4. Open the oil drain plug (2) and pour the used oil into the container
5. Close the oil drain plug
6. Fill with new oil
7. The oil level must not exceed the maximum fill level (marking on the oil sight glass (3))
8. Close oil filler plug
9. Properly dispose of used oil and oil filters in accordance with the national regulations for the disposal of hazardous materials.

**i** **HINT**

First oil change after 500 operating hours. For information on further intervals, see chapter 8.2




### 8.4.5 CHANGE AIR/OIL SEPARATOR

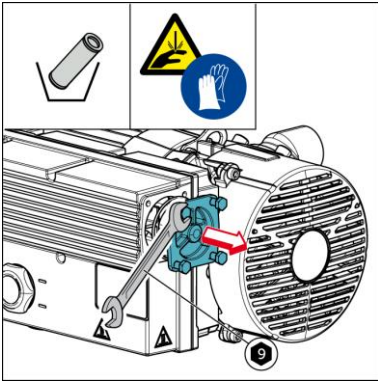


The air/oil separator cleans the process gas that flows through the pump. It mainly separates the oil that the process gas has absorbed as oil mist in the compressor chamber. As the operating time increases, the air/oil separator becomes saturated with oil, the filter resistance increases and pump failures can result.

The air/oil separator must be replaced at intervals depending on the pump type (see table 8.3.1 + 8.3.2).

1. Ensure that all requirements for maintenance operation have been met.
2. Undo the 4 screws and remove the maintenance cover
3. Turn the air/oil separator 90° to release the lock
4. Remove / replace air/oil separator
5. Install air/oil separator in reverse order
6. Properly dispose of the air/oil separator in accordance with the national regulations for the disposal of hazardous materials.

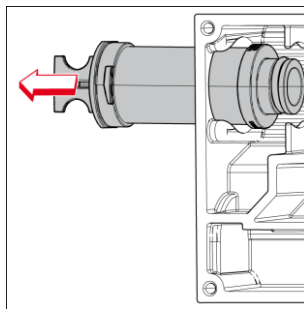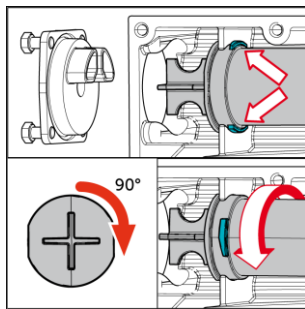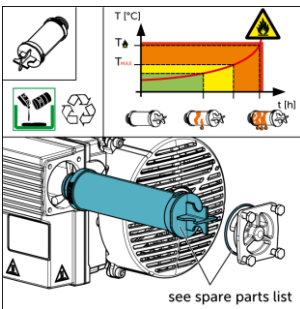

### 8.4.6 CLEAN THE SUCTION STRAINER

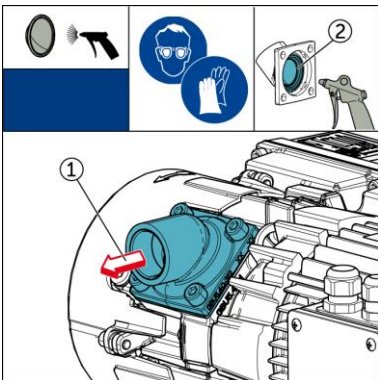


A suction strainer is installed in the connection flange to prevent larger foreign bodies from entering the inside of the pump.

The sieve must be cleaned at the specified interval (see table).

1. Ensure that all requirements for maintenance operation have been met.
2. Loosen the 4 screws on the connecting flange and remove the flange (1)
3. Clean the flange with suction strainer from the inside to the outside with compressed air (2)
4. Refit the intake flange

### 8.4.7 CHANGE GAS BALLAST VALVE FILTER

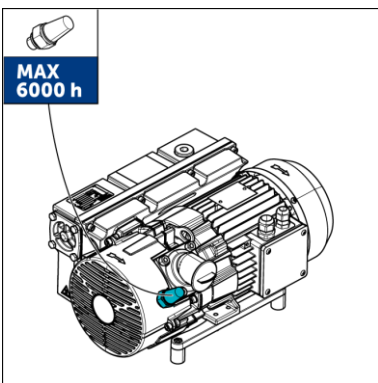

The gas ballast valve filter must be replaced at regular intervals, otherwise the water vapour capacity of the pump will be reduced and proper operation can no longer be guaranteed.

## 8.5 MEDIA LINES



### **WARNING**

Risk of injury due to stored residual energy

Lines, hoses, pipes, valves and connections must be checked for damage (leaks) at regular intervals.

The following instructions must be observed when carrying out maintenance and repair work on media lines:

- Before starting work on the media lines, the system must be depressurised and secured against being switched on again. Residual energy must be dissipated or discharged. Residual liquids in media lines must be drained off.

## 8.6 CONDITIONS FOR SWITCHING ON AGAIN

The following points must be observed before restarting after maintenance and servicing work:

- Unauthorised persons must be removed from the pump.
- The proper connection between the pump and the media lines must be checked.
- The media lines must be checked for leaks and damage.
- The power supply must be checked for damage and proper functioning.
- All operating fluids must be filled to the correct level.
- All protective devices must be present, functional and tested.

## 8.7 SPARE AND WEAR PARTS



### **WARNING**

Safety risk due to spare parts not approved by the manufacturer



A comprehensive spare parts list with all spare and wear parts for the series listed here can be found on our homepage under the following link:

[www.becker-international-shop.com](http://www.becker-international-shop.com)

## 8.8 TEMPORARY SHUTDOWN

The following steps must be observed during a temporary shutdown:

1. Shutdown
2. To switch off the pump, it must be shut down and secured against being switched on again. In addition, a warning sign must be attached to the mains disconnection device.
3. All existing electrical equipment must be individually disconnected.
4. Disconnection from the power supply
5. A qualified electrician switches the motor off and disconnects it. After carrying out the 5 safety rules, non-qualified electricians may also carry out work on the pump.
6. After completion of the decommissioning, the activities under "Recommissioning" must be followed.

## 8.9 CLEANING



### **DANGER**

Danger to life due to defective, dismantled and manipulated protective devices



### **DANGER**

Danger to life due to unexpected start-up



### **WARNING**

Danger from hot components and equipment



### **WARNING**

Risk of injury due to slipping, tripping

**CAUTION**

Contamination and damage to the environment due to operating materials

**ATTENTION**

Incorrect cleaning, for example by using the wrong cleaning agents or cleaning equipment (e.g. high-pressure cleaner), can cause damage to the pump.

**HINT**

For a detailed description of the safety instructions, see chapter 2 "Basic safety instructions".

**HINT**

Wear suitable PPE

The entire pump must be cleaned at regular intervals depending on the amount of dust. This includes cleaning all surfaces of the pump with a compressed air gun and a moistened cleaning cloth.

The cleaning instructions of the manufacturers of components and assemblies must be observed.

The use of solvents or cleaning agents containing solvents is prohibited.

The use of cleaning agents that are highly flammable or generally flammable is prohibited!

The statutory environmental protection regulations must be observed during cleaning.

The pump may only be switched on again if there is no damage to the pump and no person is exposed to danger.

## 8.10 DISMANTLING AND DECOMMISSIONING

**DANGER**

Danger to life due to electric shock - Personnel qualification

**DANGER**

Danger to life due to unexpected start-up

**WARNING**

Danger from hot components and equipment

**WARNING**

Risk of injury due to slipping, tripping

**CAUTION**

Contamination and damage to the environment due to operating materials

**HINT**

For a detailed description of the safety instructions, see chapter 2 "Basic safety instructions".

**HINT**

Wear suitable PPE

The following steps must be observed during dismantling and decommissioning:

1. Switch off the pump and enable the drive.
2. Switch off the power supply and secure it against unintentional restarting.
3. Disconnect the supply line of the drive.
4. Shut off media lines and discharge pressure differences if necessary.
5. Disconnect the media lines from the pump.
6. Clean the pump thoroughly and remove operating fluids
7. Dismantle the pump in reverse order of assembly or according to the separate dismantling instructions. Loose parts must be secured to prevent them from tipping over or falling.
8. Protect the pump from further contamination
9. Dispose of operating materials in accordance with the applicable local regulations.

## 8.11 STORAGE

The following requirements for the storage location must be observed in order to store the unused pump in a proper condition over a longer period of time. If the following requirements are not observed, damage to the pump may occur.

- the storage location must be dry and clean

- the storage location must be level
- the storage location must be protected from sudden changes in temperature and humidity
- the storage location must be protected from salt spray, industrial gases, corrosive liquids, rodents and fungal infestation

### Restocking

If the pump is to be stored for a longer period of time (more than two months) after use, the following steps must be observed.

1. Only store the pump with clean oil, change the oil.
2. Ensure that the pump is free of water or water vapour.
3. To do this, close the intake.
4. Allow the pump to run for 30 minutes after reaching operating temperature. Only draw in a small amount of dry ambient air.
5. Immediately after switching off the pump, seal all inlets and outlets with sealing plugs.
6. Silica gel packets must be placed inside the filter housing. Attach warning stickers to ensure that the packets are removed before commissioning.



#### ATTENTION

If the pump was pumping air with a high moisture content before the shutdown period, the above steps are also recommended for shorter storage periods

---

## 8.12 WASTE DISPOSAL

---



#### CAUTION

Contamination and damage to the environment due to operating materials



#### HINT

For a detailed description of the safety instructions, see chapter 2 "Basic safety instructions".


---

The pump is disposed of in a disassembled state. See chapter 8.10.

When disposing of the pump, the relevant local environmental regulations must be observed.

## 9 PRODUCT DATA SHEET

### 9.1 PRODUCT OVERVIEW

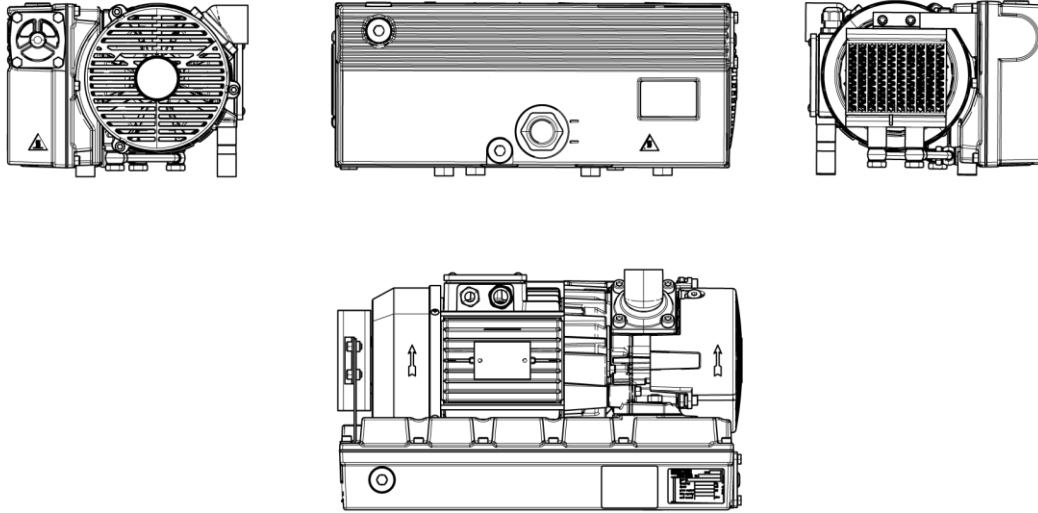

### 9.2 OPERATING PARAMETERS

#### 9.2.1 OPERATING PARAMETERS O 5.10-5.25

Variant	O 5.10	O 5.16	O 5.21	O 5.25
Volume flow 1 max.	10,5 m <sup>3</sup> /h (50 Hz)	16 m <sup>3</sup> /h (50 Hz)	23,5 m <sup>3</sup> /h (50 Hz)	26 m <sup>3</sup> /h (50 Hz)
Volume flow 2 max.	12,5 m <sup>3</sup> /h (60 Hz)	19 m <sup>3</sup> /h (60 Hz)	27 m <sup>3</sup> /h (60 Hz)	30 m <sup>3</sup> /h (60 Hz)
Vacuum	2 mbar (abs)	2 mbar (abs)	2 mbar (abs)	2 mbar (abs)
Weight	17 - 18,5 kg	18 - 19,5 kg	20 - 21,5 kg	20 - 21,5 kg
Sound pressure level 1 max.	58,5 dB(A) (50 Hz)	60,5 dB(A) (50 Hz)	64 dB(A) (50 Hz)	63 dB(A) (50 Hz)
Sound pressure level 2 max.	64 dB(A) (60 Hz)	67 dB(A) (60 Hz)	69 dB(A) (60 Hz)	66 dB(A) (60 Hz)
Permissible ambient temperature	5 - 45 °C	5 - 45 °C	5 - 45 °C	5 - 45 °C
Exhaust air temperature max.	68 °C	78 °C	82 °C	92 °C
Maximum installation height	800 m a.s.l.	800 m a.s.l.	800 m a.s.l.	800 m a.s.l.
Maximum humidity of the intake air	90 %	90 %	90 %	90 %

\* Reference data (atmosphere): 1000 mbar (100 kPa), 20 °C

Table: Operating parameters

Variant	O 5.25 XL K
Volume flow 1 max.	26 m <sup>3</sup> /h (50 Hz)
Volume flow 2 max.	30 m <sup>3</sup> /h (60 Hz)
Vacuum	2 mbar (abs)
Weight	24,5 kg
Sound pressure level 1 max.	63 dB(A) (50 Hz)
Sound pressure level 2 max.	63 dB(A) (60 Hz)
Permissible ambient temperature	5 - 45 °C
Exhaust air temperature max.	63 °C
Maximum installation height	800 m a.s.l.
Maximum humidity of the intake air	90 %

\* Reference data (atmosphere): 1000 mbar (100 kPa), 20 °C

Table: Operating parameters

## 9.2.2 OPERATING PARAMETERS U 5.40

Variant	U 5.40
Volume flow 1 max.	40 m <sup>3</sup> /h (50 Hz)
Volume flow 2 max.	48 m <sup>3</sup> /h (60 Hz)
Vacuum	1 mbar (abs)
Weight	25 - 26,5 kg
Sound pressure level 1 max.	64 dB(A) (50 Hz)
Sound pressure level 2 max.	67 dB(A) (60 Hz)
Permissible ambient temperature	5 - 40 °C
Exhaust air temperature max.	66 °C
Maximum installation height	800 m a.s.l.
Maximum humidity of the intake air	90 %

\* Reference data (atmosphere): 1000 mbar (100 kPa), 20 °C

Table: Operating parameters



### ATTENTION

Cyclical pumping out

For the U 5.40 and the U 5.40 XL, a maximum chamber volume of 150 litres must be observed in cycle operation to prevent damage to the pump.

The U 5.40 XL K is not affected by this restriction.



### ATTENTION

Continuous operation

The following pressure ranges are authorised for continuous operation.

U 5.40 and U 5.40 XL / 1-100 mbar (abs.)

U 5.40 XL K / 1-300 mbar (abs.)

O 5.10-O 5.25, O 5.25 XL K / 2-300 mbar (abs.)

## 9.3 OPERATING RESOURCES



### ATTENTION

For pumps with 1~ motors, the following oils of viscosity class ISO-VG 32 must be used.



### HINT

Pumps used in food processing require specially approved oils. They are labelled as H1 pump oil in the list below.

Operating resources	Container size	Order number
<b>Pump oils for 3~motors</b>		
Becker Lube M 68 (mineral oil)	1 litre	96002300300
	5 litres	96002300400
Becker Lube S 68 (synthetic oil)	1 litre	96002300500
	5 litres	96002300600
Becker Lube SL 68 (H1 pump oil 1))	1 litre	96002300701
	5 litres	96002300801
Becker Lube SM 68 (H1 pump oil 1))	1 litre	96003700101
	5 litres	96003700201
<b>Pump oils for 1~ motors</b>		
Becker Lube M 32 (mineral oil)	0.25 litre	96001700025
Becker Lube S 32 (synthetic oil)	0.25 litre	96000320025
	0.5 litre	96000320050
Becker Lube SL 32 (H1 pump oil 1))	1 litre	96002300901
Becker Lube SM 32 (H1 pump oil 1))	1 litre	96003700501
1) Fulfills all requirements for the lubrication of pumps in food processing plants.		

Table: Operating resources

Pump	Oil filling quantities		
	Short oil tank	Long oil tank	XL (K) oil tank
O 5.10 / O 5.16	0.3 litre	0.5 litre	---
O 5.21 / O 5.25	0.3 litre	0.5 litre	1.0 litre
U 5.40	---	0.5 litre	1.0 litre

Table: Oil filling quantities

## 9.4 TECHNICAL DATA

Technical data sheets for the pumps can be found on our homepage under the following link:

[www.becker-international.com/download](http://www.becker-international.com/download)





**MAKE IT BECKER.**